
FRONT BUMPER EXTENSION

REMOVAL


1. REMOVE FRONT SPOILER COVER (for X-Runner) (See page ET-5)




(a) Remove the 2 screws and clip, and open the front fender liner.

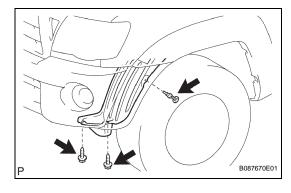


- (b) for 4WD and Pre Runner:
 - (1) Remove the screw.
 - (2) Remove the 5 retainers and front bumper extension.

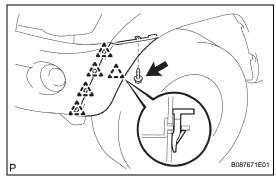




(1) Remove the 4 retainers and front bumper extension.

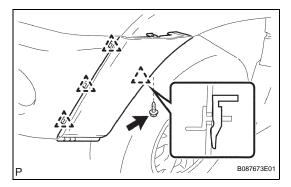


INSTALLATION


- 1. INSTALL FRONT BUMPER EXTENSION
 - (a) for 4WD and Pre Runner:
 - (1) Install new front spoiler side protector in the position shown in the illustration.

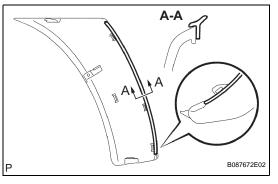




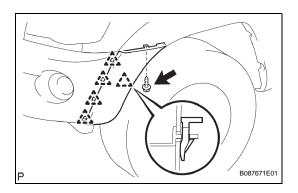


- (2) Install the front bumper with the 5 retainers.
- (3) Tighten the screw.

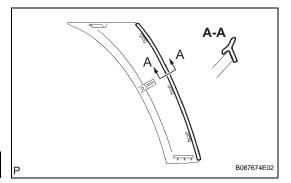

- (b) for X-Runner:
 - (1) Install new front spoiler side protector in the position shown in the illustration.

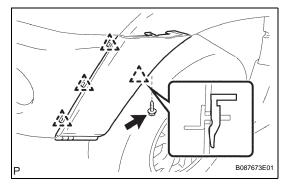

- (2) Install the front bumper with the 4 retainers.
- (3) Tighten the screw.

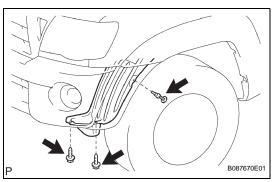

- (c) Tighten the 2 screws.
- (d) Install the clip.
- 2. INSTALL FRONT SPOILER COVER (for X-Runner) (See page ET-10)